



Cod Epson	Nr. Pag.	Stylus C42UX/SX/Plus/C44 Plus/C46	Stylus C62/CX3200	Stylus C70/C80	Stylus C82/CX5200/CX5400	Stylus C64/C66/C84/C86/CX3600/CX3650/CX6400/CX6600	Stylus D78/D92/120/120 Network/DX4000/4050/4400/5000/5050/6000/6050/7000F/7400/8400/9400F	Stylus Color 680/680TR/685	Stylus Photo R200/220/300/320/340, RX500/600/640	Stylus Photo 790/870/870 LE/875DC/890/895/915	Stylus Photo 810/820/830/830U/925/935	Stylus Photo 900	Stylus Photo 1270/1290/1290S
T007401	540									•		•	•
T007402	2*540									•		•	•
T008401	220								•••		•••		
T017401	600							•					
T018401	300							•••					
T026401	540										•		
T027401	220									•••			
T032140	1240			•	•								
T036140	330	•											
T037040	180	•••											
T040140	420		•										
T041040	300		•••										
T042240	420				•								
T042340	420				•								
T042440	420				•								
T044140	600					•							
T045240	250				•								
T045340	250				•								
T045440	250				•								
T048140	630								•				
T048240	430								•				
T048340	430								•				
T048440	430								•				
T071140	600						•						
T071240	450						•						
T071340	450						•						
T071440	450						•						